

# Panasonic®

---

Integrated Telephone Answering System

Model No.

**4 LINE**



This unit is compatible with Caller ID. To use this feature, you must subscribe to the appropriate service offered by your telephone service provider.

Please read these Operating Instructions before using the unit and save for future reference.

For assistance, visit our website:

for customers in the U.S.A. or Puerto

Rico.

## Table of Contents

Introduction .....	4	HOLD button .....	28
Accessory information .....	5	Hold reminder .....	29
Included accessories .....	5	MUTE button .....	29
Additional/replacement accessories .....	5	FLASH button .....	29
Sales and support information .....	5	Flash time .....	30
Important safety instructions .....	6	Temporary tone dialing (for rotary/ pulse service users) .....	30
For best performance .....	8	Recording a telephone conversation .....	30
 Symbols used in these operating instructions .....	9	 Phonebook .....	31
Display .....	9	Adding items to the phonebook ..	31
Location of controls .....	10	Storing items from the phonebook into the speed dialer .....	32
Battery installation .....	12	Storing items from the redial list into the phonebook .....	32
Setup .....	13	Finding and calling a phonebook item .....	33
Connecting the handset and AC adaptor .....	14	Editing items in the phonebook ..	33
Connecting the telephone line cords ..	15	Erasing one item in the phonebook .....	34
Connecting the units to individual two-line telephone jacks .....	15	Erasing all items in the phonebook	34
Connecting 2 two-line telephone jacks .....	16	Chain dial .....	34
Connecting four single-line telephone jacks .....	17	 Speed dialer .....	35
If you subscribe to a DSL service .....	18	Speed dial preference .....	35
Connecting 2 two-line telephone jacks .....	18	Adding/editing names and phone numbers .....	35
Connecting four single-line telephone jacks .....	19	Storing items from the redial list into the speed dialer .....	36
Setting up the line group .....	20	Erasing a stored entry .....	37
Connecting a communication device ..	22	Calling someone with the speed dialer .....	37
Setting the unit before use .....	23	 Intercom/Paging .....	38
Display language .....	23	Making an intercom call .....	38
Extension No. ....	23	Answering an intercom call .....	38
Date and time .....	24	Paging a designated extension ..	39
Dialing mode .....	24	Answering a single page .....	39
 Making calls .....	25	Paging all extensions .....	39
Answering calls .....	26	Answering all pages .....	39
Turning ringer on/off .....	26	Room monitor .....	40
Ringer type .....	27	Transferring calls .....	40
Turning Do Not Disturb (DND) on/off .....	27	Answering transferred calls .....	41
Making/answering another outside call during a conversation .....	28	Conference calls .....	41
Useful features during a call .....	28		
Call privacy .....	28		

Using Caller ID service . . . . .	43	Intercept call . . . . .	58
Incoming Caller ID display . . . . .	43	Playing back the greeting message . . . . .	59
Caller list . . . . .	44	Recording your greeting message . . . . .	59
Viewing the caller list . . . . .	44	Erasing your greeting message . . . . .	59
Calling back from the caller list . . . . .	44	Pre-recorded greeting message . . . . .	60
Editing a caller's phone number before calling back . . . . .	45	Listening to messages . . . . .	60
Area codes . . . . .	45	Voice memo . . . . .	61
Storing caller information into the phonebook . . . . .	46	Recording a voice memo . . . . .	61
Storing caller information into the speed dialer . . . . .	47	Remote operation . . . . .	62
Erasing selected caller information . . . . .	47	Remote code . . . . .	62
Erasing all caller information . . . . .	47	Using the answering system remotely . . . . .	62
Programmable settings . . . . .	48	Toll saver . . . . .	63
Programming the phone setup features . . . . .	51	Caller's message length . . . . .	64
Prime line . . . . .	51	Using Voice Mail service . . . . .	65
Handsfree mode . . . . .	51	Message waiting . . . . .	65
Programming the advanced setup features . . . . .	52	Headset (optional) . . . . .	66
Line group . . . . .	52	Sales and support information . . . . .	66
Reset all . . . . .	52	Connecting the optional headset to the unit . . . . .	66
Automated Attendant System operation . . . . .	53	Wall mounting . . . . .	67
Turning Automated Attendant System on/off . . . . .	53	Connecting a standard telephone . . . . .	69
Setting the Automated Attendant System day and night times . . . . .	54	Error messages . . . . .	70
Playing back the Automated Attendant System greeting messages . . . . .	55	Troubleshooting . . . . .	70
Recording the Automated Attendant System greeting messages . . . . .	55	FCC and other information . . . . .	75
Erasing the Automated Attendant System greeting messages . . . . .	56	Specifications . . . . .	77
Using multiple Automated Attendant Systems . . . . .	56	Customer services . . . . .	78
Answering system . . . . .	57	Warranty . . . . .	79
Memory capacity . . . . .	57	Index . . . . .	81
Turning the answering system on/off . . . . .	57		
Screening calls . . . . .	58		

## Introduction

---

---

We recommend keeping a record of the following information for future reference.

Serial No. \_\_\_\_\_


(found on the bottom of the unit)

Date of purchase \_\_\_\_\_

Name and address of dealer \_\_\_\_\_




- ☐ AC adaptor  
Order No. PQLV210Z

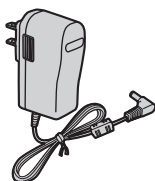


one

- ☐ Handset  
Order No. PQJXC0401Z (Black)

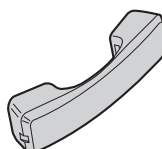

one

- ☐ Handset cord  
Order No. PQJA212N (Gray)

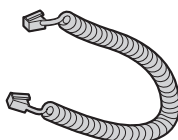


one

- ☐ 4-wire telephone line cord  
Order No. PQJA10088Z



two

 - ☐ Wall mounting adaptor  
Order No. PQYL10021Z



one

Headset	KX-TCA86, KX-TCA88HA, KX-TCA91, KX-TCA92, KX-TCA93, KX-TCA94, or KX-TCA95
2-line adaptor	KX-J24
2-line splitter	KX-J42
T-adaptor	KX-J66
2-wire telephone line cord	PQJA10075Z
9 V Alkaline (6LR61) back-up battery	Use standard store bought 9 V Alkaline battery

- To order additional/replacement accessories, call 1-800-332-5368.
- TTY users (hearing or speech impaired users) can call 1-866-605-1277.

When using the product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read all instructions carefully.
2. Follow all warnings and instructions marked on the product.
3. Unplug the product from power outlets before cleaning. Do not use liquid or aerosol cleaners. Use a moist cloth for cleaning.
4. Do not use the product near water, for example near a bathtub, wash bowl, kitchen sink, etc.
5. Place the product securely on a stable surface. Serious damage and/or injury may result if the product falls.
6. Do not cover slots and openings on the product. They are provided for ventilation and protection against overheating. Never place the product near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the product. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the product where no one can step or trip on the cord.
9. Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.
10. Never push any objects through slots in the product. This may result in the risk of fire or electric shock. Never spill any liquid on the product.
11. To reduce the risk of electric shock, do not disassemble the product. Take the product to an authorized service center when service is required. Opening or removing

covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.

12. Unplug the product from power outlets and take to an authorized service center when the following conditions occur:
  - A. When the power cord is damaged or frayed.
  - B. If liquid has been spilled into the product.
  - C. If the product has been exposed to rain or water.
  - D. If the product does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized service center.
  - E. If the product has been dropped or physically damaged.
  - F. If the product exhibits a distinct change in performance.
13. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
14. Do not use the product to report a gas leak, when in the vicinity of the leak.

## SAVE THESE INSTRUCTIONS

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the

telephone line has been disconnected at the network interface.

- Use caution when installing or modifying telephone lines.
- Do not touch the plug with wet hands.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.

To reduce the risk of fire or injury to persons, read and follow these instructions.

- Use only the battery specified.
- Do not dispose of the battery in a fire. It may explode. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care when handling the battery in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
- Do not recharge the battery provided with or identified for use with the product. The battery may leak corrosive electrolyte or explode.
- Do not attempt to rejuvenate the battery provided with or identified for use with the product by heating. Sudden release of battery electrolyte may occur causing burns or irritation to the eyes or skin.
- Remove the battery from the product if the product will not be used for a long period of time (several months or more). During this time the battery could leak in the product.
- Discard the "dead" battery as soon as possible. The "dead" battery may leak in the product.

- Do not store the product, or the battery provided with or identified for use with the product, in high temperature areas. A battery that is stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. A battery should be stabilized at room temperature prior to use after cold storage.

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact the Panasonic Call Center at 1-800-211-PANA (1-800-211-7262).

- 
- Keep the product away from electrical noise generating devices, such as fluorescent lamps and motors.
  - The product should be kept free from excessive smoke, dust, high temperature, and vibration.
  - The product should not be exposed to direct sunlight.
  - Do not place heavy objects on top of the product.
  - When you leave the product unused for a long period of time, unplug the product from the power outlet.
  - The product should be kept away from heat sources such as heaters, kitchen stoves, etc. It should not be placed in rooms where the temperature is less than 5 °C (41 °F) or greater than 40 °C (104 °F). Damp basements should also be avoided.
- 

- Wipe the outer surface of the product with a soft moist cloth. Do not use benzine, thinner, or any abrasive powder.



【 】: button name	The words in the brackets indicate button names on the unit.
【            】.【            】	
“Ringer Type”	The words in quotations indicate the menu on the display.
Select “Phone Setup”.	Press 【▼】 or 【▲】 to select “Phone Setup”.
【▼】 【▲】 【◀◀】 【▶▶】	Press down, up, left, or right on the navigator key.

100 new Caller ID, and  
198 total Caller ID

12 new messages, and  
26 total messages

03:45P 02/23 MON
EXT 11
CID:100/198 MSGW
TAD:12/26 1 34

— The current date and time

— The extension number of this phone


— Message waiting information on line 1, line 3, and line 4






Install a 9 V Alkaline (6LR61) battery (sold separately) in the battery compartment. It works as emergency power during a power failure. The unit will work as a standard telephone, so that you can make or answer outside calls with the handset. (You cannot use the speakerphone, intercom, etc.)

Open the battery cover by sliding in the direction of arrow (①), and take out the battery snap (②).

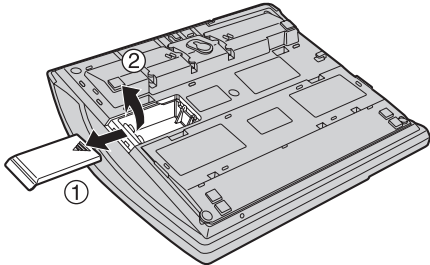

Match the polarity and snap the battery to the battery snap as shown.

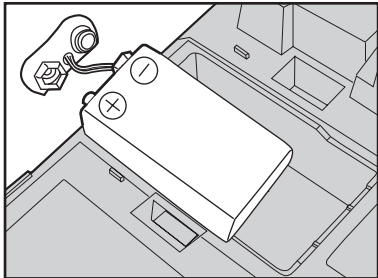

Place the battery into the battery compartment.

Dress the battery snap wire, and close the battery cover.

- Please refer to “Battery” on page 7 for correct battery usage.
- When the display shows “LOW BATT” with a 9 V battery in the unit, the battery needs to be changed immediately. If the battery level is too low, all LEDs might light up or flash

and the unit is not guaranteed to perform as normal during a power failure. Replacing with a fresh battery will restore normal function.

- The Manganese (6F22) battery can be used but operating time when using it will be dramatically shortened.
- It is recommended that the battery is replaced annually.
- It is recommended that the battery is replaced after a power outage.
- The battery operating time may depend on usage conditions, ambient temperature, and battery quality.
- During a power failure the battery will retain the clock memory (see “Date and time” on page 24) and the redial memory (see “Making a call using the redial list” on page 25). If you do not install the battery, the data in memory will be lost during a power failure.
- When storing or disposing of the battery, please cover the positive (+) and negative (−) terminals with tape.

Disconnect the telephone line cord(s) before opening the battery cover.


- You do not need to disconnect the AC adaptor, otherwise the clock memory and the redial memory will be lost.
- Please refer to “Battery” on page 7 for correct battery usage.

The battery works as during a power failure.



While in use (talking)	Approx. 3 hours
While not in use (standby)	Approx. 4 hours

This unit can be used in 3 positions.

---

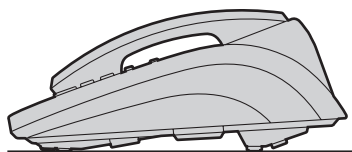



You can attach the wall mounting adaptor to slope this unit.

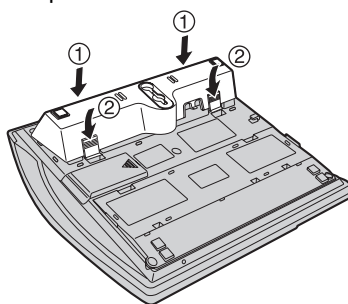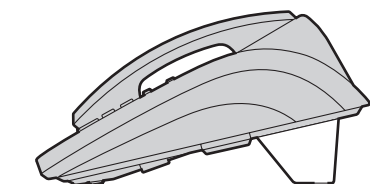

- To attach the wall mounting adaptor, push it in the direction of the arrows (① and ②) as shown.

See “Wall mounting” on page 67 for details.

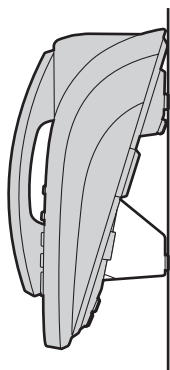

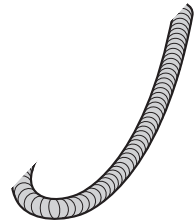

Handseal

JK


the AC  
or cord to  
vent it from

air

in conner


and be conr  
ect the AC  
ay cause  
st work d  
the sam  
T-adar  
ency pov  
up batt



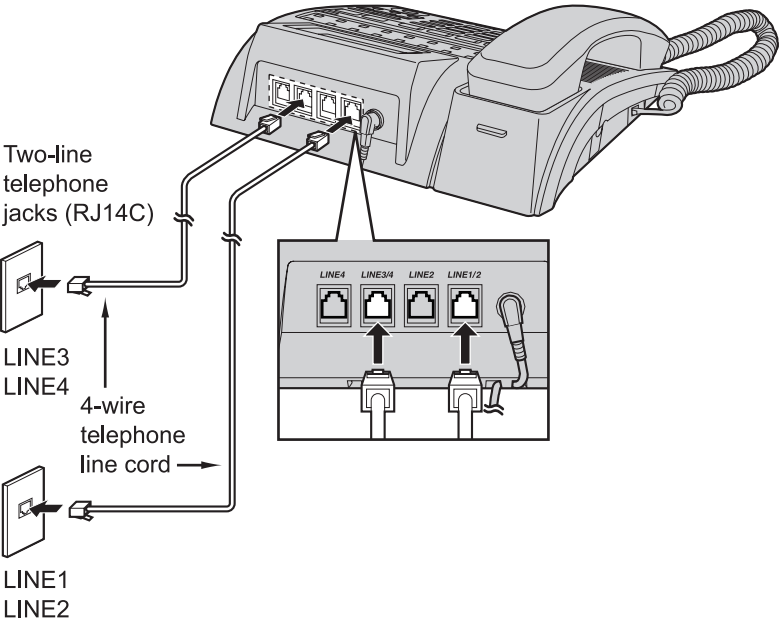



For this connection, please purchase two Panasonic 2-line adaptors KX-J24 and two 2-wire telephone line cords (Order No. PQJA10075Z) (see “Additional/replacement accessories” on page 5).

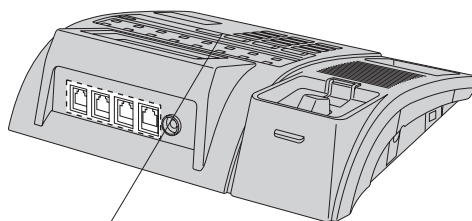

\*1 2-line adaptor merges a 2-wire (single line) telephone outlet with another 2-wire (single line) telephone line onto a single 4-wire (2-line) telephone line cord.


## Preparation

Please attach a noise filter (contact your DSL provider) to the telephone line between the unit and the telephone line jack in the event of the following:


- Noise is heard during conversations.
- Caller ID features (see “Using Caller ID service” on page 43) do not function properly.

For this connection, please purchase a Panasonic 2-line splitter KX-J42 and two 2-wire telephone line cords (Order No. PQJA10075Z) (see “Additional/replacement accessories” on page 5).


Example: DSL line is LINE2.

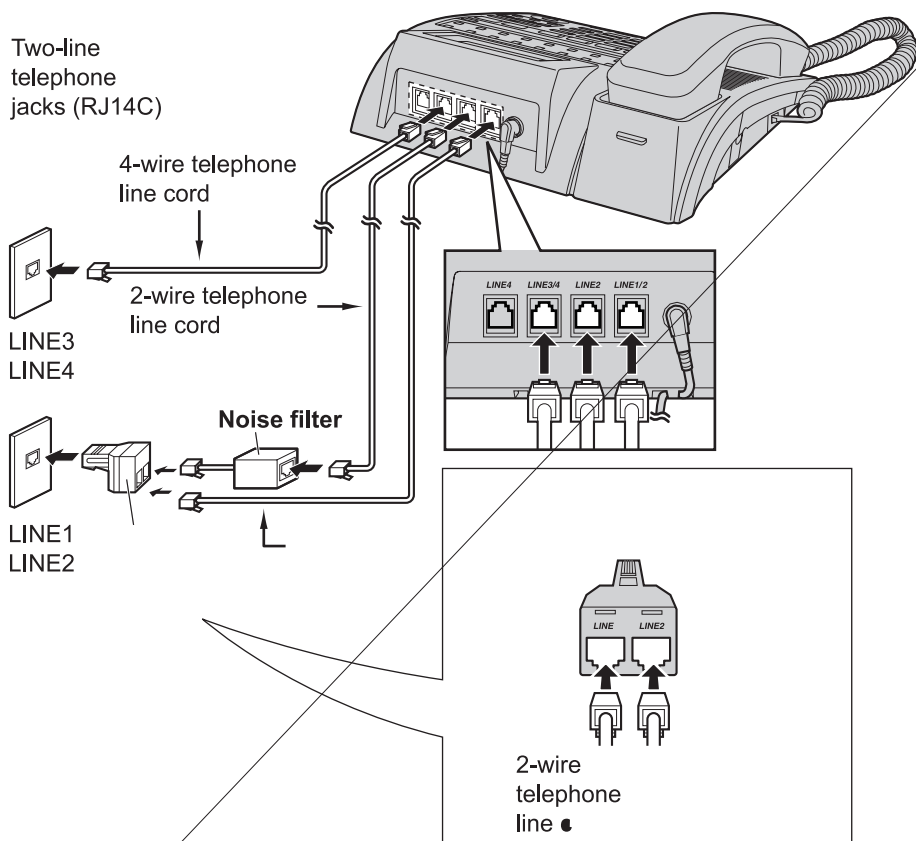

and three  
placement

 


ds

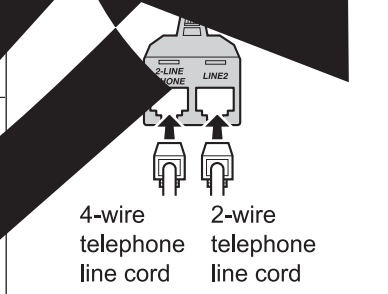

\*1 2-line adaptor module connects a single line (single line) telephone outlet with another 2-wire (single line) telephone line cord onto a single 4-wire (2-line) telephone line cord.

If you have more than 2 system phones (KX-TS4100/KX-TS4200/KX-TS4300) and use more than 4 lines in your system phones, you can set up the line group to work correctly with the units. To program the line group, see “Line group” on page 52.

- You can set up the line group only for LINE4.

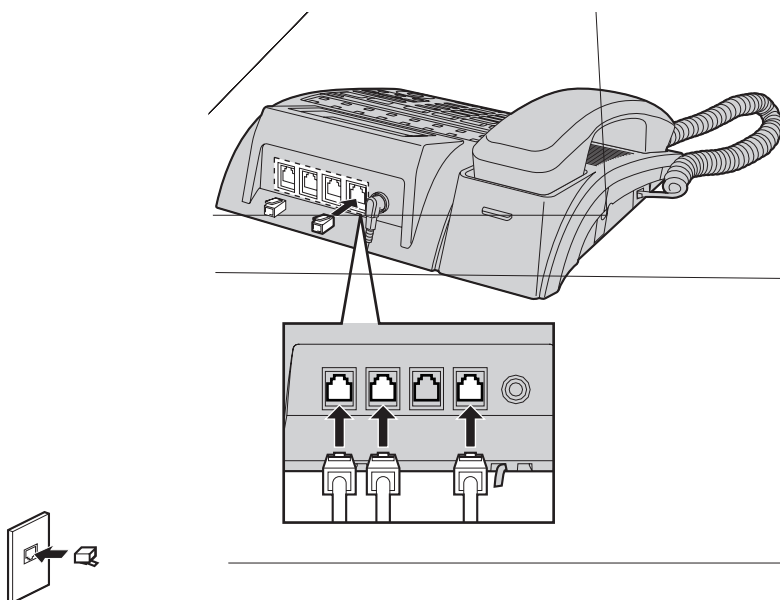


- You can set up the line group unconnected from other extensions (private line). To program the private line, see “Line group” on page 52.



**Preparation**

After connecting the telephone line cords to two-line telephone jacks, you can connect a communication device (computer, modem, fax, etc.) through this unit using the LINE2 or LINE4 jacks.

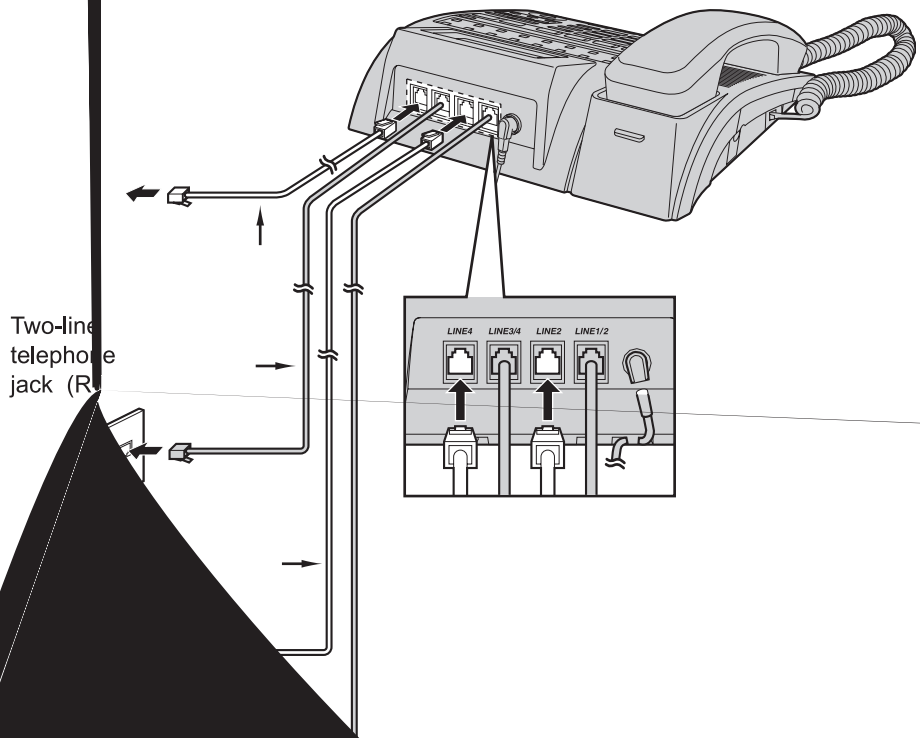

Two-line  
telephone  
jack (RJ22)

Make or answer other

Choose whether the display appears in English or Spanish. The default setting is "English".

- Make sure that the unit is in standby mode.

Press [ ].

Select "Phone Setup", then press [ ].

Select "Language", then press [ ].

Select the desired setting, then press [ ].

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].
- If you select a language you cannot read, press [ ] 2 times, press [▼], press [ ], select the desired language, then press [ ].

Set the correct date and time. When you play back a message from the answering system (see “Listening to messages” on page 60), the unit announces the day and time it was recorded.

- Make sure that the unit is in standby mode.

Press [  ].

Select “**Phone Setup**”, then press [  ].

Select “**Date & Time**”, then press [  ].

→Date & Time
Auto Mute
Tone/Pulse
[▼/▲]:Scroll

Enter the current year by selecting 2 digits, then press [  ].  
2006

[  ] [  ]

- You can set the year 2000 to 2099.

Enter the current month and day by selecting 2 digits for each, then press [  ].

August 15

[  ] [  ] [  ] [  ]

Enter the current hour and minute (12-hour clock format) by selecting 2 digits for each, then press [  ].

9:30

[  ] [  ] [  ] [  ]

Select “**A**” (AM) or “**P**” (PM), then press [  ].

Press and hold [  ] to return to standby mode.

- To return to the previous menu, press [ **◀◀** ].

- If you make a mistake when entering the date and time, press [ **◀◀** ] or [ **▶▶** ] to move the cursor, then make the correction.

If you cannot make calls, change this setting depending on your telephone line service. The default setting is “**Tone**”.

“**Tone**”: For tone dial service.

“**Pulse**”: For rotary pulse dial service.

- Make sure that the unit is in standby mode.

Press [  ].

Select “**Phone Setup**”, then press [  ].

Select “**Tone/Pulse**”, then press [  ].

→Tone/Pulse
Flash Time
Hold Reminder
[▼/▲]:Scroll

Select the desired setting, then press [  ].

Tone/Pulse
=Tone
[SET]:Save
[▼/▲]:Change

Press and hold [  ] to return to standby mode.

- To return to the previous menu, press [ **◀◀** ].





or

- To cancel,  
【

Press 【  
standby mode.

- To return to the previous  
【◀◀】.

A pause is sometimes required when making calls using a PBX or long distance service. When storing a calling card access number and/or PIN in the phonebook, a pause is also needed (see “Chain dial” on page 34).

For example, if you need to dial the line access number “9” when making outside calls with a PBX:

Lift the handset or press  
【           】 or a line button.

Press 【    】, then press  
【           】.

Dial the phone number.

- A 3.5 second pause is inserted each time 【           】 is pressed.  
Press repeatedly to insert longer pauses.

Tu

- Make  
mode.

Press 【

Select “Adv  
press 【

Select **"Ringer On/Off"**, then press [ ].

→Ringer On/Off  
Ringer Type  
Line Group  
[▼/▲]:Scroll

Select the line you want to set, then press [ ].

→Line1 Ringer  
Line2 Ringer  
Line3 Ringer  
[▼/▲]:Scroll

Select the desired setting, then press [ ].

Line1 Ringer  
=On  
[SET]:Save  
[▼/▲]:Change

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

Select a ring pattern (4 types) for each line.

- Make sure that the unit is in standby mode.

Press [ ].

Select **"Advanced Setup"**, then press [ ].

Select **"Ringer Type"**, then press [ ].

→Ringer Type  
Line Group  
Display MSGW  
[▼/▲]:Scroll

Select the line you want to set, then press [ ].

→Line1 Ring Type  
Line2 Ring Type  
Line3 Ring Type  
[▼/▲]:Scroll

Select the desired setting, then press [ ].

Line1 Ring Type  
=Type-1  
[SET]:Save  
[▼/▲]:Change

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].
- Incoming intercom calls use Type-1 and cannot be changed.

You will not hear call rings or paging when this feature is activated. The line indicator flashes for outside calls and the INTERCOM indicator flashes for intercom calls.

Press [ ] to turn on/off the Do Not Disturb (DND) feature.

- When the Do Not Disturb (DND) feature is turned on, the DND indicator lights and the display shows **"DND"**.

03:45P 02/23 MON  
DND 11  
CID:100/198 MSGW  
TAD:12/26 1 34

- When the Do Not Disturb (DND) feature is turned off, the DND indicator goes out.

If you hear beeps during a conversation and another line indicator flashes rapidly, an incoming call is being received. You can answer the 2nd call while holding the 1st call.

Press [ ] to put the 1st call on hold.

- The line indicator flashes.
- If you press the other line button before pressing [ ], the 1st call is disconnected.

To answer a 2nd call, press the relevant line button.

To make a 2nd call, press the other line button or [ ], then dial the phone number.

- The other line indicator lights.

To return to the 1st call, press the line button for the 1st call.

- The 2nd call is disconnected.
  - To hold the 2nd call in step 3, press [ ] before pressing the line button for the 1st call.
- When the Do Not Disturb (DND) feature is turned on, beeps will not be heard during a conversation.
  - To establish a conference call, see "Conference calls" on page 41.

---

Call privacy allows you to prevent other extensions from joining your conversations with outside callers. The phone always keeps call privacy on unless you manually turn this feature off.

---

During the call, press the line button for the call. You will hear a double-beep.

- Any system phones can join the call by pressing the relevant line button.
- 

Press the line button again during the call. You will hear a 3-beep.

- Call privacy will turn on again automatically when you hang up.
  - If a non-system phone is connected on the same line, this feature does not work for the phone.
  - When a non-system phone answers a call, any system phones can join the call by pressing the relevant line button.
- 

This feature allows you to put a call on hold (for an outside call only).

---

During an outside call, press [ ].

- The line indicator flashes.
- If using the handset, you can place it on the cradle.
- To transfer the call to another extension, see "Transferring calls" on page 40.

Press the line button.

- The other extension users can take the call by pressing their line buttons.
- If a call is kept on hold for more than 60 or 120 seconds, an alarm tone starts to sound (hold reminder). To turn off the hold reminder, see "Hold reminder" on page 29.
- If a call is kept on hold for more than 5 minutes, the call is disconnected. To keep a call on hold longer than 5 minutes, release hold before 5 minutes and then place the call on hold again.

This feature reminds you the call is on hold by sounding a 4-tone alarm every 60 or 120 seconds. The default setting is "60 Seconds".

- Make sure that the unit is in standby mode.

Press [ ].

Select "Phone Setup", then press [ ].

Select "Hold Reminder", then press [ ].

→Hold Reminder  
 Handsfree Mode  
 Prime Line  
 [▼/▲]:Scroll

Select the desired setting, then press [ ].

Hold Reminder  
 = 60 Seconds  
 [SET]:Save  
 [▼/▲]:Change

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

While mute is turned on, you can hear the other party, but the other party cannot hear you.

To mute your voice, press [ ].

- The MUTE indicator lights.
- To return to the conversation, press [ ] again. The MUTE indicator goes out.
- When you switch between the handset and the speakerphone or press [ ], mute will be released.

Pressing [ ] allows you to use special features of your host PBX such as transferring an extension call, or accessing optional telephone services such as Call Waiting.

- To change the flash time, see "Flash time" on page 30.

To use Call Waiting, you must subscribe to Call Waiting service of your telephone service provider.

This feature allows you to receive calls while you are already talking on the phone.

If you receive a call while on the phone, you will hear a Call Waiting tone.

Press [ ] to answer the 2nd call after the tone.

- To switch between calls, press [ ].

- Please contact your telephone service provider for details and availability of this service in your area.

The flash time depends on your telephone exchange or host PBX. You can select the following flash time: 80 ms, 100 ms, 200 ms, 300 ms, 400 ms, 500 ms, 600 ms, and 700 ms. The default setting is "600 ms".

- Make sure that the unit is in standby mode.

Press [  ].

Select "Phone Setup", then press [  ].

Select "Flash Time", then press [  ].

→Flash Time
Hold Reminder
Handsfree Mode
[▼/▲]:Scroll

Select the desired setting, then press [  ].

Flash Time
=600 ms
[SET]:Save
[▼/▲]:Change

Press and hold [  ] to return to standby mode.

- To return to the previous menu, press [ **⏮** ].
- If you are connected via a PBX, a longer flash time may be necessary to use PBX functions (transferring a call, etc.). Consult your PBX installer for the correct setting.

You can temporarily switch the dialing mode to tone when you need to access touch tone services (for example, answering services, telephone banking services, etc.).

Press [ **✳** ] (TONE) before entering access numbers which require tone dialing.

You can record your conversation while on an outside call.

During an outside call, press [  ], then press [  ].

To stop recording, press [  ] again.

- Many states have imposed regulations on the manner in which 2-way telephone conversations may be recorded, so you should inform the other party that the conversation is being recorded. Consult your local telephone company for further information.
- Recorded conversations are treated as new messages.
- To listen to the recorded conversation, see "Listening to messages" on page 60.
- If the message memory becomes full, "Memory Full" will blink and recording will stop. Erase unnecessary messages (see "Erasing a message" on page 61).
- The recording time of the telephone conversation does not have limitation.
- If there is no sound recorded for a while, recording mode will end.

You can add up to 200 items to the phonebook and search for phonebook items by name.

- Make sure that the unit is in standby mode.

Press [ **Full** ].

- If the display shows “(Full)”, erase other items from the phonebook (see “Erasing one item in the phonebook” on page 34).

Select “Add New Record”, then press [ **Add** ].

Phonebook (029)  
View Records  
→Add New Record  
[▼/▲]:Scroll

- The total number of items in the phonebook are shown on the display.
- If there are no items in the phonebook, the display will show “(Empty)”.

Enter the name (max. 16 characters; see “Character table” on page 31).

Select “Done”, then press [ **Done** ].

- To cancel, select “Cancel”, then press [ **Cancel** ].

Enter the phone number (max. 24 digits).

- If required, you can insert [ **\*** ], [ **#** ] or [ **\*** ] (TONE) in a phone number.
- To add the last number dialed, you can press [ **Last** ] instead of entering the phone number.

Select “Done”, then press

[ **Done** ].

- To cancel, select “Cancel”, then press [ **Cancel** ].
- To add other items, repeat from step 2.

Press [ **Standby** ] to return to standby mode.

- To return to the previous menu, press [ **Back** ].

[ <b>1</b> ]	, - ' & . ( ) @ ! 1
[ <b>2</b> ]	A B C a b c 2
[ <b>3</b> ]	D E F d e f 3
[ <b>4</b> ]	G H I g h i 4
[ <b>5</b> ]	J K L j k l 5
[ <b>6</b> ]	M N O m n o 6
[ <b>7</b> ]	P Q R S p q r s 7
[ <b>8</b> ]	T U V t u v 8
[ <b>9</b> ]	W X Y Z w x y z 9
[ <b>0</b> ]	Space 0
[ <b>*</b> ]	*
[ <b>#</b> ]	#

- To enter another character that is located on the same dial key, first press [ **Next** ] to move the cursor to the next space.

Press [ **Back** ] or [ **Next** ] to move the cursor to the character or number you want to erase, then press [ **Erase** ]. Enter the appropriate character or number.

- Make sure that the unit is in standby mode.

Press [ ].

Select "View Records", then press [ ].

Press [▼] or [▲] to select the desired item, then press [ ].

- To search for the item by initial, see "Searching for a name by initial" on page 33.

Select "Copy To SPD", then press [ ].

Press the speed dial button ([ ] to [ ]).

OR

Press [ ], then press the speed dial button ([ ] to [ ]).

Press [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].
- If the speed dial has already stored the content, you can select whether it should be replaced or not. To replace current content, select "Yes?", then press [ ]. To keep original content, select "No?", then press [ ].

- Make sure that the unit is in standby mode.

Press [ ].

Press [▼] or [▲] to select the desired number, then press [ ].

Select "Copy To PhBook", then press [ ].

Enter the name (max. 16 characters; see "Character table" on page 31).

Select "Done", then press [ ].

- To cancel, select "Cancel", then press [ ].

Edit the phone number if necessary.

- If required, you can insert [ ], [ ] or [✱] (TONE) in a phone number.

Select "Done", then press [ ].

- To cancel, select "Cancel", then press [ ].

Press [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].



Phonebook items can be searched for alphabetically by scrolling through the phonebook items or by entering the first initial.

Press [ ].

Select **"View Records"**, then press [ ].

Press [▼] or [▲] to select the desired item.

Lift the handset or press [ ] or a line button to dial the phone number.

Press [ ].

Press the dialing key ([ ] to [ ], [ # ], or [ \* ]) that corresponds to the first letter you are searching for (see "Character table" on page 31).

**"LISA"**

Press [ ] repeatedly to display the first phonebook entry starting with the initial **"L"** and go to step 3.

- If there is no item corresponding to the letter you selected, **"No Entries"** is displayed.

Press [▼] or [▲] to select the desired item.

Lift the handset or press [ ] or a line button to dial the phone number.

- Make sure that the unit is in standby mode.

Press [ ].

Select **"View Records"**, then press [ ].

Press [▼] or [▲] to select the desired item, then press [ ].

- To search for the item by initial, see "Searching for a name by initial" on page 33.

Select **"Edit"**, then press [ ].

Edit the name if necessary (see "Character table" on page 31).

Select **"Done"**, then press [ ].

- To cancel, select **"Cancel"**, then press [ ].

Edit the phone number if necessary.

- If required, you can insert [ ], [ ] or [ \* ] (TONE) in a phone number.

Select **"Done"**, then press [ ].

- To cancel, select **"Cancel"**, then press [ ].

Press [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

- Make sure that the unit is in standby mode.

Press [                      ].

Select "View Records", then press [                      ].

Press [▼] or [▲] to select the desired item, then press [                      ].

- To search for the item by initial, see "Searching for a name by initial" on page 33.

Select "Yes?", then press [                      ] or [                      ].

- To cancel, select "No?", then press [                      ].

Press [                      ] to return to standby mode.

- To return to the previous menu, press [◀◀].
- 

- Make sure that the unit is in standby mode.

Press [                      ].

Select "View Records", then press [                      ].

Select "End Of List" by pressing [▲], then press [                      ].

Select "Yes?", then press [                      ] or [                      ].

- To cancel, select "No?", then press [                      ].

Press [                      ] to return to standby mode.

- To return to the previous menu, press [◀◀].
- 

This feature allows you to dial phone numbers in the phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that you have stored in the phonebook, without having to dial manually.

During an outside call, press [                      ].

Select "View Records", then press [                      ].

Press [▼] or [▲] to select the desired item, then press [                      ].

- To search for the item by initial, see "Searching for a name by initial" on page 33.

Select "Dial", then press [                      ].

- When storing a calling card access number and your PIN in the phonebook as one phonebook item, press [                      ] to add pauses after the number and PIN as necessary (see "PAUSE button (for PBX/long distance service users)" on page 26).
- If you have rotary or pulse service, you need to press [✳] (TONE) before pressing [                      ] in step 1 to change the dialing mode temporarily to tone.

You can store up to 32 names and phone numbers in the speed dial buttons. (16 names and numbers in upper memory locations, 16 names and numbers in lower memory locations.)

If you want to place speed dialer calls using only one button, set this feature to "CO Call". If you want to place intercom call using only one button, set this feature to "Intercom DSS". If you want to place speed dialer calls after reviewing the entries, set this feature to "Preview Memory".

- Make sure that the unit is in standby mode.

Press [ ].

Select "Phone Setup", then press [ ].

Select "Speed Dial", then press [ ].

→Speed Dial  
Language  
Extension No.  
[▼/▲]:Scroll

Select "SPD Preference", then press [ ].

→SPD Preference  
Edit/View SPD  
[▼/▲]:Scroll

Select the desired setting, then press [ ].

SPD Preference  
=CO Call  
[SET]:Save  
[▼/▲]:Change

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

- Make sure that the unit is in standby mode.

Press [ ].

Select "Phone Setup", then press [ ].

Select "Speed Dial", then press [ ].

→Speed Dial  
Language  
Extension No.  
[▼/▲]:Scroll

Select "Edit/View SPD", then press [ ].

→Edit/View SPD  
SPD Preference  
[▼/▲]:Scroll

Press the speed dial button ([ ] to [ ]).

OR

Press [ ], then press the speed dial button ([ ] to [ ]).

Edit/View SPD  
  
Select SPD Key

Press [ ].

Select "Edit", then press [ ].

Enter (or edit) the name (max. 16 characters; see "Character table" on page 31).

- To erase the character, press [ ] or select "Delete Char", then press [ ].

Select "Done", then press [ ].

- To cancel, select "Cancel", then press [ ].

Enter (or edit) the phone number (max. 24 digits).

- To erase the number, press [ ] or select "Delete Char", then press [ ].
- If required, you can insert [ ], [ ] or [ \* ] (TONE) in a phone number.
- To add the last number dialed, you can press [ ] instead of entering the phone number.

Select "Done", then press [ ].

- To cancel, select "Cancel", then press [ ].

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

---

Press [◀◀] or [▶▶] to move the cursor to the character or number you want to erase, then press [ ]. Enter the appropriate character or number.

---

•

- Make sure that the unit is in standby mode.

Press [ ].

Select "Phone Setup", then press [ ].

Select "Speed Dial", then press [ ].

→Speed Dial  
Language  
Extension No.  
[▼/▲]:Scroll

Select "Edit/View SPD", then press [ ].

→Edit/View SPD  
SPD Preference  
[▼/▲]:Scroll

Press the speed dial button ([ ] to [ ]).

OR

Press [ ], then press the speed dial button ([ ] to [ ]).

Edit/View SPD  
Select SPD Key

Press [ ].

Select "Yes?", then press [ ] or [ ].

- To cancel, select "No?", then press [ ].

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

### CO Call

Press the desired speed dial button ([ ] to [ ]).

OR

Press [ ], then press the desired speed dial button ([ ] to [ ]).

### Intercom DSS

Lift the handset or press [ ] or a line button.

Press the desired speed dial button ([ ] to [ ]).

OR

Press [ ], then press the desired speed dial button ([ ] to [ ]).

### Preview Memory

Press the desired speed dial button ([ ] to [ ]).

OR

Press [ ], then press the desired speed dial button ([ ] to [ ]).

- You can review the entries by pressing [▼] or [▲].

Lift the handset or press [ ] or a line button.

---

A 2-way intercom can be set up between two extensions. Make sure that each extension has been assigned the number ("11" to "26", see "Extension No." on page 23) and is connected to the LINE1/2 and LINE3/4 telephone jacks of the unit (page 15, 16, 17).

- If you press the line button during an intercom call (paging), the intercom call (paging) is disconnected and you can make or answer an outside call.
- 

Press [                      ].

- The INTERCOM indicator lights.
- The SP-PHONE indicator lights and the speakerphone turns on.

Lift the handset.

- The SP-PHONE indicator goes out.

Press the speed dial (extension) button or enter the extension number.

To end the intercom call, place the handset on the cradle.

- The INTERCOM indicator goes out.
- 

Press [                      ].

- The INTERCOM indicator lights.
- The SP-PHONE indicator lights and the speakerphone turns on.

Press the speed dial (extension) button or enter the extension number.

To end the intercom call, press [                      ] or [                      ].

- The INTERCOM and the SP-PHONE indicators go out.
- 

### Intercom DSS

Press the speed dial (extension) button.

- The INTERCOM indicator lights.
- The SP-PHONE indicator lights and the speakerphone turns on.

To end the intercom call, press [                      ] or [                      ].

- The INTERCOM and the SP-PHONE indicators go out.
- 

The INTERCOM indicator flashes rapidly and the extension number of the caller is displayed.

Lift the handset or press [                      ] or [                      ].

---

Any extensions can answer the intercom call directed to another extension.

Press [                      ].

- Turn Do Not Disturb (DND) off at the destination extension (see “Turning Do Not Disturb (DND) on/off” on page 27).

Press [ ] 2 times.

- The INTERCOM indicator lights.
- The SP-PHONE indicator lights and the speakerphone turns on.

Press the speed dial (extension) button or enter the extension number, then speak into the MIC or the handset.

- The destination extension does not ring, instead it will beep 3 times.
- You can make an intercom call by pressing [ ].

To end the paging, place the handset on the cradle or press [ ].

Lift the handset or press [ ].

Speak into the MIC or the handset.

If this feature is set to off, sounds at the paged extension is heard automatically.

- Make sure that the unit is in standby mode.

Press [ ].

Select “Phone Setup”, then press [ ].

Select “Auto Mute”, then press [ ].

→Auto Mute  
Tone/Pulse  
Flash Time  
[▼/▲]: Scroll

Select the desired setting, then press [ ].

Auto Mute  
=On  
[SET]: Save  
[▼/▲]: Change

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

- Turn Do Not Disturb (DND) off at the destination extension (see “Turning Do Not Disturb (DND) on/off” on page 27).

Press [ ].

- The INTERCOM indicator lights.
- The SP-PHONE indicator lights and the speakerphone turns on.

Press [ ] to page all extensions, then speak into the MIC or the handset.

- The other extensions will hear your paging voice through the speaker.

To end the paging, place the handset on the cradle or press [ ] or [ ].

- You can only talk with an extension who answers first.

Press [ ].

You can monitor a room using the intercom feature. For example, you can monitor a baby from different areas of the house.

To use this feature, turn auto mute off at the destination extension.

- Turn auto mute off at the destination extension (see “Turning auto mute on/off” on page 39).
- Make sure that the destination unit is in standby mode.

Press [ ] 2 times.

- The INTERCOM indicator lights.
- The SP-PHONE indicator lights and the speakerphone turns on.

Press the speed dial (extension) button or enter the extension number.

- The destination extension does not ring, instead it will beep 3 times.
- Your unit starts to monitor the room through the extension.
- If necessary, you can mute your sound output by pressing [ ].

To end monitoring, press

[ ] or place the handset on the cradle.

- To avoid being monitored and keep privacy, turn Do Not Disturb (DND) on.
- The monitored extension user can stop being monitored by pressing [ ] or [ ].

You can transfer an outside call to another extension.

During an outside call, press [ ] to put the call on hold.

Press the speed dial (extension) button or enter the extension number, then place the handset on the cradle.

- If the transferred extension does not answer within 1 minute, the transferred call will ring at all extensions.

- Any extensions can take a transferred call by pressing the relevant line button.
- If a call is kept on hold for more than 60 or 120 seconds, an alarm tone starts to sound (hold reminder). To turn off the hold reminder, see “Hold reminder” on page 29.
- If a call is kept on hold for more than 5 minutes, the call is disconnected.

During an outside call, press [ ] 2 times to put the call on hold.

- You can make an intercom call by pressing [ ].

Press the speed dial (extension) button or enter the extension number.

- If the paged extension does not answer, press the relevant line button.



After the paged extension answers, announce the transfer.

Press [                    ], then place the handset on the cradle.

- If the transferred extension does not answer within 1 minute, the transferred call will ring at all extensions.
- Any extensions can take a transferred call by pressing the relevant line button.
- To page all extensions in step 2, press [    ].
- If a call is kept on hold for more than 60 or 120 seconds, an alarm tone starts to sound (hold reminder). To turn off the hold reminder, see "Hold reminder" on page 29.
- If a call is kept on hold for more than 5 minutes, the call is disconnected.

The line indicator flashes rapidly and the extension number of the caller is displayed.

Lift the handset or press [                    ] or a line button.

Any extensions can answer a transferred call directed to another extension.

Press the relevant line button.

While you are talking with an outside caller, you can make or answer a 2nd call on the other line, and then combine the calls to establish a conference call.

During an outside call, press [                    ].

To answer a 2nd call, press the relevant line button.

To make a 2nd call, press the other line button or [                    ], then dial the phone number.

When the 2nd call is connected, press [                    ] to make a conference call.

- To hang up both lines, place the handset on the cradle or press [                    ].
- To hang up only one line, press the line button for the party with which you want to continue talking.
- To put both lines on hold, press [                    ].
  - To talk with only one caller, press the line button for the party with which you want to continue talking.
  - To resume both lines, press the relevant line button, then press [                    ].

- If a call is kept on hold for more than 60 or 120 seconds, an alarm tone starts to sound (hold reminder). To turn off the hold reminder, see "Hold reminder" on page 29.
- If a call is kept on hold for more than 5 minutes, the call is disconnected.

While you are talking with an outside caller, one more extension can join the conversation and establish a conference call.

During an outside call, press  
【            】 to put the call on hold.

To page another extension, press the speed dial (extension) button or enter the extension number.

When the paged party answers, press 【            】 to make a conference call.

- To hang up both the outside and intercom calls, place the handset on the cradle or press  
【            】. (The other remaining parties on the line can still talk.)
- If a call is kept on hold for more than 60 or 120 seconds, an alarm tone starts to sound (hold reminder). To turn off the hold reminder, see "Hold reminder" on page 29.
- If a call is kept on hold for more than 5 minutes, the call is disconnected.

This unit is Caller ID compatible. To use Caller ID features, you must subscribe to Caller ID service of your telephone service provider.

When an outside call is being received, the date and time of the call, the calling party's name, phone number, and the called line are displayed. Caller information for the last 200 different callers is logged in the caller list by the most recent call to the oldest. When the caller list is full, the oldest call is deleted.

- Generally caller information is displayed from the 2nd ring.

```
03:45P 02/23
Jack Smith
1-555-321-5555
L1
```

You can switch the display by pressing [◀◀] or [▶▶] to check the length of the call.

```
03:45P 02/23 MON
00:29
```

- If the unit cannot receive caller information, the following is displayed:
  - “**Out Of Area**”: The caller dialed from an area which does not provide Caller ID service.
  - “**Private Caller**”: The caller requested not to send caller information.
  - “**Long Distance**”: The caller called you long distance.
- If the unit is connected to a PBX system, caller information may not be received properly. Consult your PBX supplier.

If a call is not answered, the unit treats the call as a missed call. The number of missed calls is shown on the display. This lets you know if you should view the caller list to see who called while you were out.

If you subscribe to both Caller ID and Call Waiting with Caller ID services, the 2nd caller's information is displayed after you hear a Call Waiting tone (see “For Call Waiting service users” on page 29). Please contact your telephone service provider for details and availability of this service in your area.

```
03:45P 02/23
Jack Smith
1-555-321-5555
(Call Waiting)L1
```

If two or more lines receive calls at the same time, only one caller's information can be displayed at a time.

To review the Caller ID of another line, press [◀◀] or [▶▶].

The format of phone numbers displayed will depend on the home and local area codes you programmed into the phone (see “Area codes” on page 45).

- If the incoming call came from your home area code, only the phone number is displayed.
- If the incoming call came from one of your pre-programmed local area codes, the phone number with the local area code prefixed is displayed.
- If the incoming call did not come from any of your area codes, one of the 2 following cases can occur:

- If the phone number is 10 digits, “1” is automatically inserted and display before the phone number.
- If the phone number is less than 10 digits, only the phone number is displayed.

Home area code is set to “999”.

Local area code is set to “888”.

- When a number from “999” area code is received (for example, “999-xxx-xxxx”), it displays as a 7-digit number.

xxx-xxxx

- When a number from “888” (set to one of the local area codes) area code is received (for example, “888-xxx-xxxx”), it displays as a 10-digit number.

888-xxx-xxxx

- When a number from “333” (not set to the local area code) area code is received (for example, “333-xxx-xxxx”), it displays as a 11-digit number.

1-333-xxx-xxxx

- If you are in a region where 10 digits are used to dial within your area code, you are advised to set the home area code to “000” and you must set your area code as a local area code.
- To edit a caller’s phone number, see “Editing a caller’s phone number before calling back” on page 45.

This phone automatically resets the date and time each time new information is received. You can set the date and time yourself if you wish (see “Date and time” on page 24).

- Make sure that the unit is in standby mode.

Press [ ].

Press [▼] to search from the most recent call, or [▲] to search from the oldest call.

To exit the list, press [ ].

- To return to the previous menu, press [◀◀].

- Make sure that the unit is in standby mode.

Press [ ].

Press [▼] to search from the most recent call, or [▲] to search from the oldest call.

Press [ ].

- If the number requires editing, see “Editing a caller’s phone number before calling back” on page 45.

Select “Dial Alternate” (or “Dial”), then press [ ].

- If you want to select a desired line and dial out, press the line button.

- To return to the previous menu, press [◀◀].



- Make sure that the unit is in standby mode.

Press [            ].

Select "Advanced Setup", then press [            ].

Select "Area Codes", then press [            ].

→Area Codes
Reset All
Ringer On/Off
[▼/▲]:Scroll

Select the area code you want to erase, then press [            ].

Press [            ].

Select "Yes?", then press [            ] or [            ].

- To cancel, select "No?", then press [            ].

Press and hold [            ] to return to standby mode.

- To return to the previous menu, press [◀◀].

- Make sure that the unit is in standby mode.

Press [            ].

Select the desired item, then press [            ].

Select "Copy To PhBook".

- To edit the phone number, press [▶▶] repeatedly until the phone number is shown in the desired format. ([◀◀] does not work.)

Press [            ].

Press [            ] to return to standby mode.

- To return to the previous menu, press [◀◀].

- Make sure that the unit is in standby mode.

Press [ ].

Select the desired item, then press [ ].

Select "Copy To SPD".

- To edit the phone number, press [▶▶] repeatedly until the phone number is shown in the desired format. ([◀◀] does not work.)

Press [ ].

Press the speed dial button ([ ]) to [ ].

OR

Press [ ], then press the speed dial button ([ ] to [ ]).

Press [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].
- If the speed dial has already stored the content, you can select whether it should be replaced or not. To replace current content, select "Yes?", then press [ ]. To keep original content, select "No?", then press [ ].

- Make sure that the unit is in standby mode.

Press [ ].

Select the desired item, then press [ ].

Select "Yes?", then press [ ] or [ ].

- To cancel, select "No?", then press [ ].

Press [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

- Make sure that the unit is in standby mode.

Press [ ].

Press [ ].

Select "Yes?", then press [ ] or [ ].

- To cancel, select "No?", then press [ ].

Press [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

You can customize the unit by programming the following features.  
Make sure that the unit is in standby mode.

- In the following table, \* shows the default setting.
- To return to the previous menu, press [◀◀].
- You can exit feature setup and return to the idle status any time by pressing and holding [ ].

### Phone Setup

Speed Dial	SPD Preference	CO Call*, Intercom DSS, Preview Memory	35
	Edit/View SPD	—	35
Language	—	English*, Español	23
Extension No.	—	11* – 26	23
Date & Time	—	2006 12/31 12:00A*	24
Auto Mute	—	On*, Off	39
Tone/Pulse	—	Tone*, Pulse	24
Flash Time	—	80 ms, 100 ms, 200 ms, 300 ms, 400 ms, 500 ms, 600 ms*, 700 ms	30
Hold Reminder	—	60 Seconds*, 120 Seconds, Off	29
Handsfree Mode	—	Headset*, Speakerphone	51
Prime Line	—	Line1*, Line2, Line3, Line4	51



## Advanced Setup

Ringer On/Off	Line1 Ringer	On*, Off	26
	Line2 Ringer	On*, Off	
	Line3 Ringer	On*, Off	
	Line4 Ringer	On*, Off	
Ringer Type	Line1 Ring Type	Type-1*, Type-2, Type-3, Type-4	27
	Line2 Ring Type	Type-1*, Type-2, Type-3, Type-4	
	Line3 Ring Type	Type-1*, Type-2, Type-3, Type-4	
	Line4 Ring Type	Type-1*, Type-2, Type-3, Type-4	
Line Group	—	Line 04* - 15, Private Line	52
Display MSGW	—	On, Off*	65
Clear MSGW	—	Yes, No	65
Area Codes	Home Area Code	3 digits, (Empty)*	45
	Local Area C1	3 digits, (Empty)*	
	Local Area C2	3 digits, (Empty)*	
	Local Area C3	3 digits, (Empty)*	
	Local Area C4	3 digits, (Empty)*	
	Local Area C5	3 digits, (Empty)*	
Reset All	—	Yes, No	52

**AA/TAD Setup**

Auto Attendant	—	On, Off*	53
AA Answer Delay	—	06* - 12 Seconds	54
Day Time	—	09:00A*	54
Night Time	—	06:00P*	54
TAD Ans. Delay	—	14 - 40 Seconds (20 Seconds*)	57
Toll Saver	—	On, Off*	63
Remote Code	—	3 digits, 123*	62
Message Length	—	Unlimited*, 1 Minute, Greeting Only	64
Call Screening	—	On*, Off	58
Intercept Call	—	On*, Off	58

If the selected line is ringing or all lines are idle, it has the highest priority to be picked up when you lift the handset or press [ ].

- Make sure that the unit is in standby mode.

Press [ ].

Select "Phone Setup", then press [ ].

Select "Prime Line", then press [ ].

→Prime Line  
Speed Dial  
Language  
[▼/▲]:Scroll

Select the desired setting, then press [ ].

Prime Line  
=Line1  
[SET]:Save  
[▼/▲]:Change

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

You can use this phone in "Handsfree" mode by using the speakerphone on the unit or a headset (optional).

This feature specifies a mode to be automatically selected each time you press a line key with the handset on the cradle.

- Make sure that the unit is in standby mode.

Press [ ].

Select "Phone Setup", then press [ ].

Select "Handsfree Mode", then press [ ].

→Handsfree Mode  
Prime Line  
Speed Dial  
[▼/▲]:Scroll

Select the desired setting, then press [ ].

Handsfree Mode  
=Headset  
[SET]:Save  
[▼/▲]:Change

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].
- If you set "Handsfree" mode to "Headset" but do not actually have a headset connected, speakerphone will be used.

Set All"

in standby

].

ed Setup", then

].

Set All", then press

].

→Reset All  
Ringer On/Off  
Ringer Type  
[▼/▲]:Scroll

Select "Yes?", then press

[ ].

Reset All  
Yes?  
[SET]:Reset  
[▼/▲]:Change

- To cancel, select "No?", then press [ ].

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

then press

oup  
04  
: Save  
▲]: Change

and [ ] to  
standby mode.

to the previous menu, press

transferring a call to a different line  
group through line 4 is not allowed.

The Automated Attendant System is a flexible communication tool that can enhance your productivity by improving your call management.

When the Automated Attendant System on this phone is turned on, the phone answers incoming calls with a greeting message and routes the callers to other extensions in the system.

You need to set the day and night times (see "Setting the Automated Attendant System day and night times" on page 54) to use the Automated Attendant System. You can then use the different greeting messages for those times.

- The Automated Attendant System only works with a multi-phone system.

Call is received.

The Automated Attendant System answers the call and play a greeting message.

, the call is transferred to the required extension. the Automated Attendant System plays an auxiliary greeting message.

the Automated Attendant System transfers the call to extension 11.

Three different greeting messages are available. If you do not record your own greeting messages (see "Recording the Automated Attendant System greeting messages" on page 55), the following pre-recorded greeting messages play.

*"Thank you for calling. If you know your party's extension, you may dial it at any time, otherwise please dial zero."*

*"Thank you for calling. We cannot answer your call. If you would like to leave a message to your party's extension, please dial it now, otherwise please dial zero."*

*"Please enter 11 for attendant."*

- Make sure that the unit is in standby mode.

Press [ ].

Select "AA/TAD Setup", then press [ ].

Select "Auto Attendant", then press [ ].

→Auto Attendant
AA Answer Delay
Day Time
[▼/▲] : Scroll

Select the desired setting, then press [ ].

Auto Attendant
=Off
[SET] : Save
[▼/▲] : Change

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].
- When the Automated Attendant System is turned on, the display shows "AA Mode".

```
03:45P 02/23 MON
EXT 11 AA Mode
CID:100/198 MSGW
TAD:12/26 1 34
```

This setting changes the amount of time the phone waits before playing the greeting message. After the selected amount of time passes, the phone plays the greeting message.

- Make sure that the unit is in standby mode.

Press [ ].

Select "AA/TAD Setup", then press [ ].

Select "AA Answer Delay", then press [ ].

```
→AA Answer Delay
Day Time
Night Time
[▼/▲]:Scroll
```

Select the desired setting, then press [ ].

```
AA Answer Delay
=06 Seconds
[SET]:Save
[▼/▲]:Change
```

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

The Automated Attendant System day (or night) greeting message will begin playing at the time programmed as day until the time you programmed as night, and vice versa.

- Make sure that the unit is in standby mode.

Press [ ].

Select "AA/TAD Setup", then press [ ].

Select "Day Time" or "Night Time", then press [ ].

```
→Day Time
Night Time
TAD Ans. Delay
[▼/▲]:Scroll
```

Enter the hour and minute, then press [ ].

```
Day Time
=9:00A
[SET]:Save
[DIGIT]:Change
```

Select "A" (AM) or "P" (PM), then press [ ].

```
Day Time
=09:00
[SET]:Save
[▼/▲]:Change
```

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].
- If you make a mistake when entering the date and time, press [◀◀] or [▶▶] to move the cursor, then make the correction.

- If you set the same time for day and night time, the system will play the day time greeting message only.

The phone plays this message when an outside caller presses [ ] after hearing the day or night time greeting message.

- Make sure that the unit is in standby mode.

Press [ ].

Select the desired setting, "AA Day-OGM", "AA Night-OGM" or "AA Aux-OGM", then press [ ].

TAD Operation  
→AA Day-OGM  
AA Night-OGM  
[▼/▲]:Scroll

Select "Play", then press [ ].

AA Day-OGM

[SET]:Play ↕

To stop playing, press [ ] while the Automated Attendant System greeting message is playing.

Press [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

You can record up to 90 seconds of the Automated Attendant System greeting messages.

- Make sure that the unit is in standby mode.

Press [ ].

Select the desired setting, "AA Day-OGM", "AA Night-OGM" or "AA Aux-OGM", then press [ ].

TAD Operation  
→AA Day-OGM  
AA Night-OGM  
[▼/▲]:Scroll

Select "Re-Record", then press [ ].

AA Day-OGM

[SET]:Re-Record↕

After the unit beeps, speak clearly about 20 cm (8 inches) away from the MIC.

To stop recording, press [ ].

- The greeting message is played back.

Press [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].
- If there is no sound recorded for a while, recording mode will end.





- When callers leave messages, the unit records the day and time of each message. Make sure the date and time have been correctly set (see "Date and time" on page 24).

The total recording capacity (including your greeting message, caller messages, voice memo, and telephone conversation) is about 60 minutes. A maximum of 99 messages (including a greeting message) can be recorded.

- If the message memory becomes full, "Memory Full" will blink, recording will stop, and the pre-recorded greeting message ("Hello, we are not available now. Thank you for calling. Memory full.") will be announced to callers. Erase unnecessary messages (see "Erasing a message" on page 61).

```
03:45P 02/23 MON
EXT 11
CID:100/198 MSGW
Memory Full 1 34
```

Press [ ] to turn on/off the answering system. (The default setting is on.)

- When the answering system is turned on, the ANSWER ON indicator lights.
- When the answering system is turned off, the ANSWER ON indicator goes out.

This setting changes the amount of time the phone waits before playing the greeting message (14 - 40 Seconds). After the selected amount of time passes, the phone plays the greeting message. The default setting is "20 Seconds".

- Make sure that the unit is in standby mode.

Press [ ].

Select "AA/TAD Setup", then press [ ].

Select "TAD Ans. Delay", then press [ ].

```
→TAD Ans. Delay
Toll Saver
Remote Code
[▼/▲]:Scroll
```

Select the desired setting, then press [ ].

```
TAD Ans. Delay
=20 Seconds
[SET]:Save
[▼/▲]:Change
```

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

While a caller is leaving a message, you can listen to the call through the speaker. To adjust the speaker volume, press **[ - ]** or **[ + ]** repeatedly. You can answer the call by lifting the handset or pressing **[ ]** or a line button.

- To listen to the call through the speaker, turn Do Not Disturb (DND) off (see “Turning Do Not Disturb (DND) on/off ” on page 27) before the answering system is activated.

- Make sure that the unit is in standby mode.

Press **[ ]**.

Select “**AA/TAD Setup**”, then press **[ ]**.

Select “**Call Screening**”, then press **[ ]**.

→Call Screening  
Intercept Call  
Auto Attendant  
[▼/▲]:Scroll

Select the desired setting, then press **[ ]**.

Call Screening  
=On  
[SET]:Save  
[▼/▲]:Change

Press and hold **[ ]** to return to standby mode.

- To return to the previous menu, press **[|◀◀]**.

While screening a call, you can answer the call by pressing the relevant line button with the other compatible extension phone.

- Make sure that the unit is in standby mode.

Press **[ ]**.

Select “**AA/TAD Setup**”, then press **[ ]**.

Select “**Intercept Call**”, then press **[ ]**.

→Intercept Call  
Auto Attendant  
AA Answer Delay  
[▼/▲]:Scroll

Select the desired setting, then press **[ ]**.

Intercept Call  
=On  
[SET]:Save  
[▼/▲]:Change

Press and hold **[ ]** to return to standby mode.

- To return to the previous menu, press **[|◀◀]**.

- Make sure that the unit is in standby mode.

Press [ ].

Select "TAD Ans-OGM", then press [ ].

TAD Operation  
→TAD Ans-OGM  
AA Day-OGM  
[▼/▲]:Scroll

Select "Play", then press [ ].

TAD Ans-OGM

[SET]:Play ⇅

To stop playing, press [ ] while the greeting message is playing.

Press [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

You can record your own greeting message (up to 90 seconds) that is played when the answering system answers a call. If you do not record a greeting message, a pre-recorded greeting message is used. If the message memory becomes full, the pre-recorded greeting message ("Hello, we are not available now. Thank you for calling. Memory full.") will be announced to callers.

- Make sure that the unit is in standby mode.

Press [ ].

Select "TAD Ans-OGM", then press [ ].

TAD Operation  
→TAD Ans-OGM  
AA Day-OGM  
[▼/▲]:Scroll

Select "Re-Record", then press [ ].

TAD Ans-OGM

[SET]:Re-Record ⇅

After the unit beeps, speak clearly about 20 cm (8 inches) away from the MIC.

To stop recording, press [ ].

- The greeting message is played back.

Press [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].
- If there is no sound recorded for a while, recording mode will end.

- Make sure that the unit is in standby mode.

Press [ ].

Select "TAD Ans-OGM", then press [ ].

TAD Operation  
→TAD Ans-OGM  
AA Day-OGM  
[▼/▲]:Scroll

Select "Play", then press

[                      ].

TAD Ans-OGM

[SET] :Play    ⇅

Press [                      ] while your greeting message is playing.

Select "Yes?", then press [                      ] or [                      ].

TAD Ans-OGM

Playing

Erase

Yes?            ⇅

- To cancel, select "No?", then press [                      ].

Press [                      ] to return to standby mode.

- To return to the previous menu, press [◀◀].

---

If you erase (or do not record) your own greeting message, the unit plays a pre-recorded greeting message for callers asking them to leave a message. If the message length is set to "Greeting Only" (see "Caller's message length" on page 64), incoming messages are not recorded and the unit plays a different pre-recorded greeting message: (*"Hello, we are not available now. Thank you for calling."*). The call will end after the message has played. To play back the pre-recorded greeting message, see "Playing back the greeting message" on page 59.

---

When new messages have been recorded, the MESSAGE indicator flashes. When you have listened to all new messages, the MESSAGE indicator will switch from flashing to lit.

- Make sure that the unit is in standby mode.

Press [                      ].

- The unit plays new messages.
- When you have no new messages, the unit plays back all messages.

To stop playback, press [                      ] again.

- When you have erased all messages, the MESSAGE indicator goes out.

---

Press [ - ] or [ + ] repeatedly while listening to a message.

---

Press [◀◀] during playback.

- If pressed within the first 3 seconds of a message, the previous message is played.

---

Press [▶▶] during playback.

---

Press [                      ] during playback.

- To resume playback, press [                      ] again while "Play" is displayed.
- To stop playback completely, press [                      ] or select "Exit", then press [                      ] again.

Press [ ] during playback.

Select "Yes?", then press [ ]  
or [ ].

- To cancel, select "No?", then press [ ].

- Make sure that the unit is in standby mode.

Press [ ].

Select "Erase All MSG", then press [ ].

TAD Operation  
→Erase All MSG  
TAD Ans-OGM  
[▼/▲]:Scroll

Select "Yes?", then press [ ]  
or [ ].

Erase All MSG  
All Message:19  
Erase All  
Yes? ⇅

- To cancel, select "No?", then press [ ].

Press [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

You can use the unit to leave a voice memo (voice message) for yourself or someone else. Voice memos can be played back later with the same operation used to play back answering system messages.

- Make sure that the unit is in standby mode.

Press [ ].

Select "Record Memo", then press [ ].

TAD Operation  
→Record Memo  
Erase All MSG  
[▼/▲]:Scroll

After the unit beeps, speak clearly about 20 cm (8 inches) away from the MIC.

To stop recording, press [ ].

Press [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].
- The recording time of the voice memo (voice message) doesn't have limitation.
- If there is no sound recorded for a while, recording mode will end.

Using a touch tone phone, you can call your phone number from outside or another extension in the phone system and access the unit to listen to messages.

- In order to operate the answering system remotely, you must first set a remote code (see “Remote code” on page 62). This code must be entered each time you operate the answering system remotely.

A remote code must be entered when operating the answering system remotely (see “Using the answering system remotely” on page 62). This code prevents unauthorized parties from listening to your messages remotely. The default setting is “123”.

- Make sure that the unit is in standby mode.

Press [  ].

Select “**AA/TAD Setup**”, then press [  ].

Select “**Remote Code**”, then press [  ].

→Remote Code  
Message Length  
Call Screening  
[▼/▲]: Scroll

Enter the desired 3-digit remote code, then press [  ].

Remote Code  
= 123  
[SET]: Save  
[DIGIT]: Change

Press and hold [  ] to return to standby mode.

- To return to the previous menu, press [  ].
- The remote code can be edited, but not deleted.

- Make sure that the answering system is turned on (see “Turning the answering system on/off” on page 57).

Dial your phone number from a touch tone phone.

After the greeting message starts, enter your remote code (see “Remote code” on page 62).

Enter the remote commands (see “Remote commands” on page 63).

When finished, hang up.

- Turn Do Not Disturb (DND) off at the destination extension (see “Turning Do Not Disturb (DND) on/off” on page 27).

Page the extension of the answering system you wish to reach (see “Paging a designated extension” on page 39).

Enter your remote code within 20 seconds (see “Remote code” on page 62).

or

...ing system  
...ing the  
.../off" on page 57)  
...d Attendant System  
... "Turning Automated  
...stem on/off" on page 53).

Make sure that the unit is in standby mode.

Press [ ].

Select "AA/TAD Setup", then press [ ].

Select "Toll Saver", then press [ ].

→Toll Saver
Remote Code
Message Length
[▼/▲]: Scroll

seconds of  
message is

the greeting, you  
greeting by pressing

Select the desired setting, then press  
[                      ].

Toll Saver  
=Off  
[SET] : Save  
[▼/▲] : Change

Press and hold [                      ] to  
return to standby mode.

- To return to the previous menu, press  
[◀◀].

If you subscribe to a flat-rate service package that includes Caller ID, Call Waiting, Voice Mail, and unlimited local/regional/long distance calls, please note the following:

- To use the Voice Mail service provided by your telephone service provider rather than the unit's answering system, turn off the answering system (see "Turning the answering system on/off" on page 57).
- To use this unit's answering system rather than the Voice Mail service provided by your telephone service provider, please contact your telephone service provider to deactivate your Voice Mail service. If your telephone service provider cannot do this:
  - Set this unit's **"TAD Ans. Delay"** setting so that this unit's answering system answers calls before the Voice Mail service of your telephone service provider does (see "TAD answer delay" on page 57). It is necessary to check the time required to activate the Voice Mail service provided by your telephone service provider before changing this setting.

– Change the time of the Voice Mail service so that the answering system can answer the call first. To do so, consult your telephone service provider.

You can change the maximum message recording time allotted to each caller. The default setting is **"Unlimited"**.

**"Greeting Only"**: The unit plays the greeting message (*"Hello, we are not available now. Thank you for calling."*) but does not record caller messages.

**"1 Minute"**: The caller can record the message up to 1 minute.

- Make sure that the unit is in standby mode.

Press [                      ].

Select **"AA/TAD Setup"**, then press  
[                      ].

Select **"Message Length"**, then  
press [                      ].

→Message Length  
Call Screening  
Intercept Call  
[▼/▲] : Scroll

Select the desired setting, then press  
[                      ].

Message Length  
=Unlimited  
[SET] : Save  
[▼/▲] : Change

Press and hold [                      ] to  
return to standby mode.

- To return to the previous menu, press  
[◀◀].



Voice Mail is an automatic answering service offered by your telephone service provider. After you subscribe to this service, the telephone service provider's Voice Mail system will answer calls for you when you are unavailable to answer the phone or when your line is busy. Messages are recorded by the telephone service provider, not your telephone.

- To use the Voice Mail service provided by your telephone service provider rather than the unit's answering system, turn off the answering system (see "Turning the answering system on/off" on page 57).

If you subscribe to the Voice Mail service, the display will flash when you have unretrieved messages waiting. After retrieving the message, the indicator will be deleted.

```
03:45P 02/23 MON
EXT 11
CID:100/198 `MSGW`
TAD:12/26 ,1 34`
```

Turn on or off the current MSGW indicators on the display.

- Make sure that the unit is in standby mode.  
Press [ ].  
Select "Advanced Setup", then press [ ].  
Select "Display MSGW", then press [ ].

```
→Display MSGW
Clear MSGW
Area Codes
[▼/▲]:Scroll
```

Select the desired setting, then press [ ].

```
Display MSGW
=Off
[SET]:Save
[▼/▲]:Change
```

Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

- Make sure that the unit is in standby mode.

Press [ ].

Select "Advanced Setup", then press [ ].

Select "Clear MSGW", then press [ ].

```
→Clear MSGW
Area Codes
Reset All
[▼/▲]:Scroll
```

Select "Yes?", then press [ ].

```
Clear MSGW
Yes?
[SET]:Clear
[▼/▲]:Change
```

- To cancel, select "No?", then press [ ].


Press and hold [ ] to return to standby mode.

- To return to the previous menu, press [◀◀].

## Useful Information

- To order replacement accessories, call 1-800-332-5368.
- TTY users (hearing or speech impaired users) can call 1-866-605-1277.

Connecting a headset to the unit allows hands-free phone conversations. We recommend using the Panasonic headset noted on page 5.

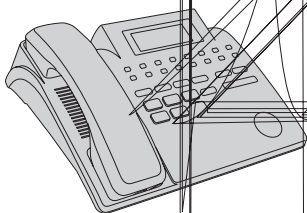

- Headset shown is KX-TCA88HA.

Press [ ] to make or answer a call.

- If you misdial when making a call, press [ ] and start again from step 1.

To hang up, press [ ].

While using the headset, press [ - ] or [ + ].

Press [ ], then place the handset on the cradle.

When the handset is on the cradle, lift the handset.

When the handset is off-hook, press [ ] again.


Press [ ].

Press [ ].


- If you unplug the headset while the phone is in use, the phone will not automatically switch to speakerphone. You must press [ ] to switch.

This unit can be mounted on a wall phone plate.


Pull down the handset hook until it locks,

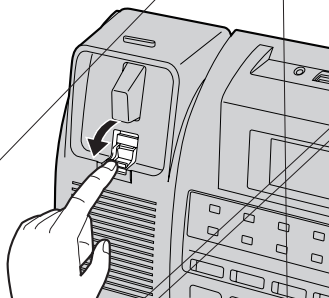


Connect the AC adaptor, and dress the AC adaptor cord as shown.

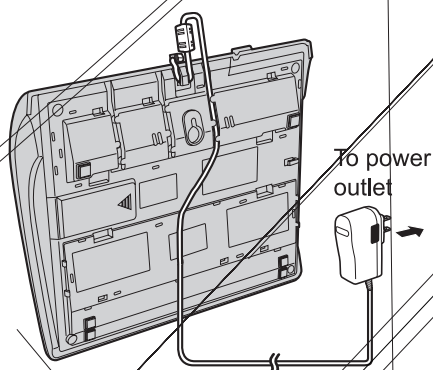


Dress the telephone line cord as shown. Tuck the telephone line cord inside the wall mounting adaptor, then push it in the direction of the arrows (① and ②).

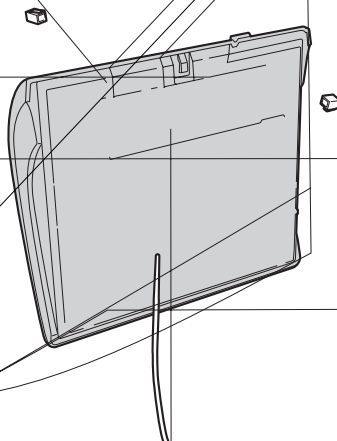

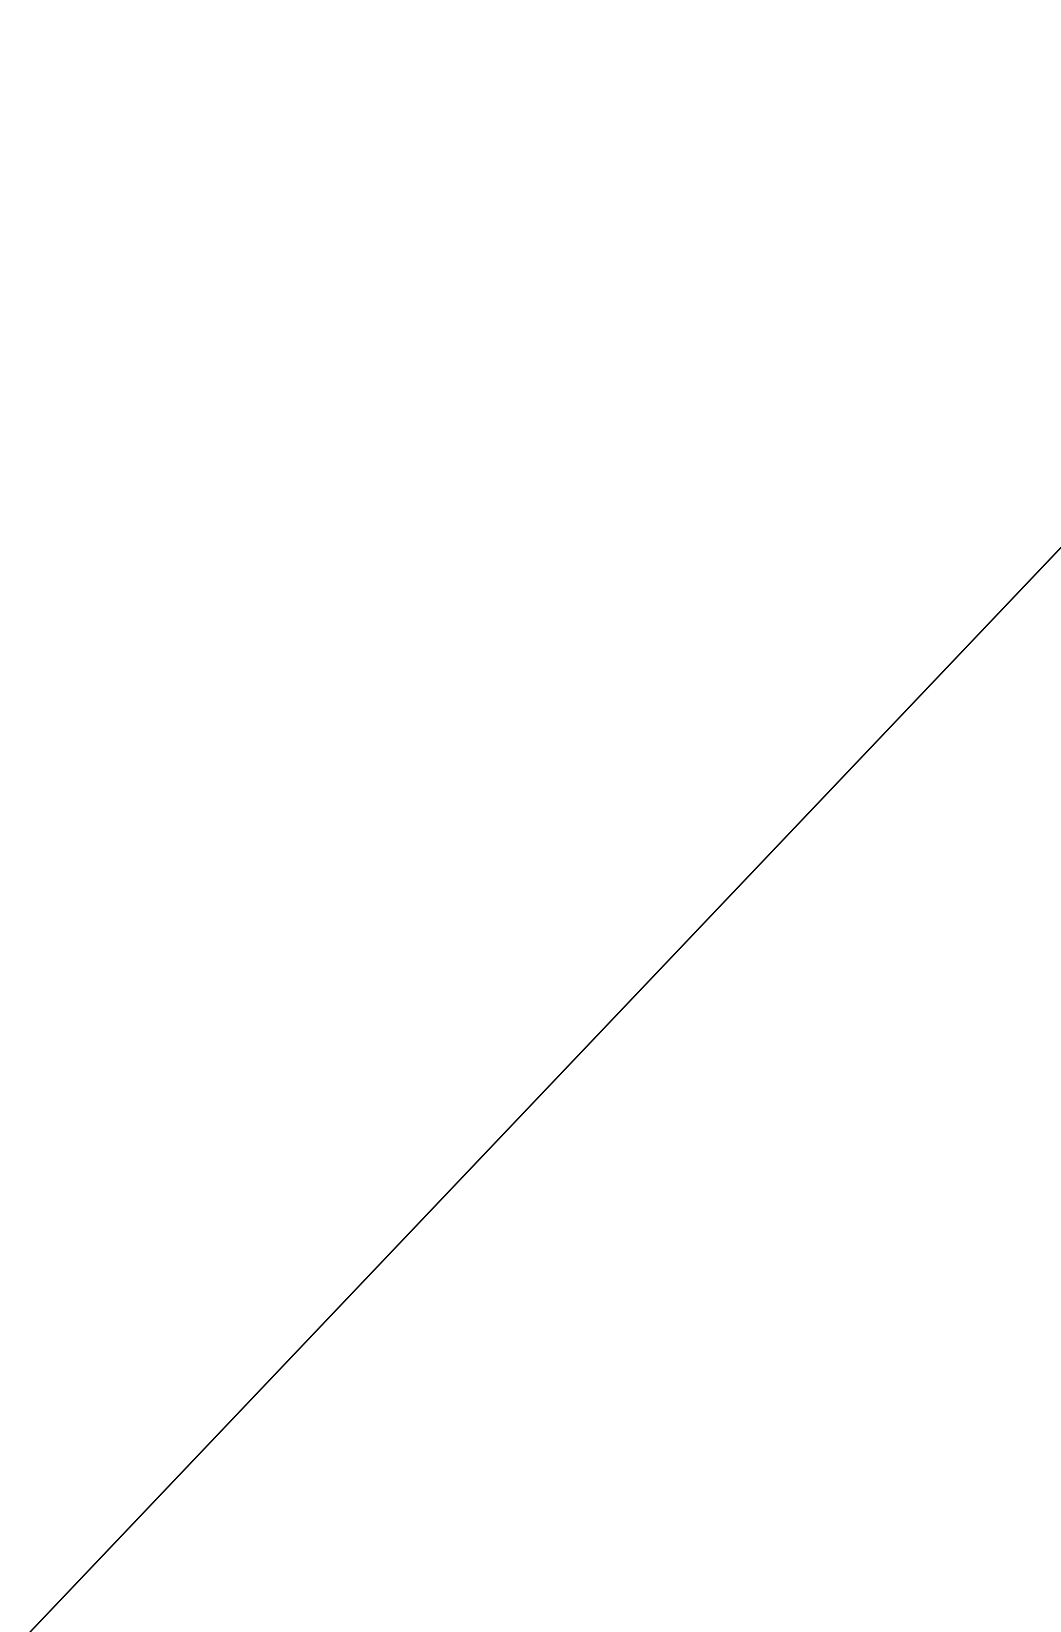

If the backup battery has been discharged during a power failure, the unit will not work. If required, you can connect a standard telephone on LINE 2 or LINE 4 of this unit using the Panasonic T-adaptor KX-J66. To order, call the accessories telephone number on page 5.

Example: Connecting a standard telephone on LINE 4.

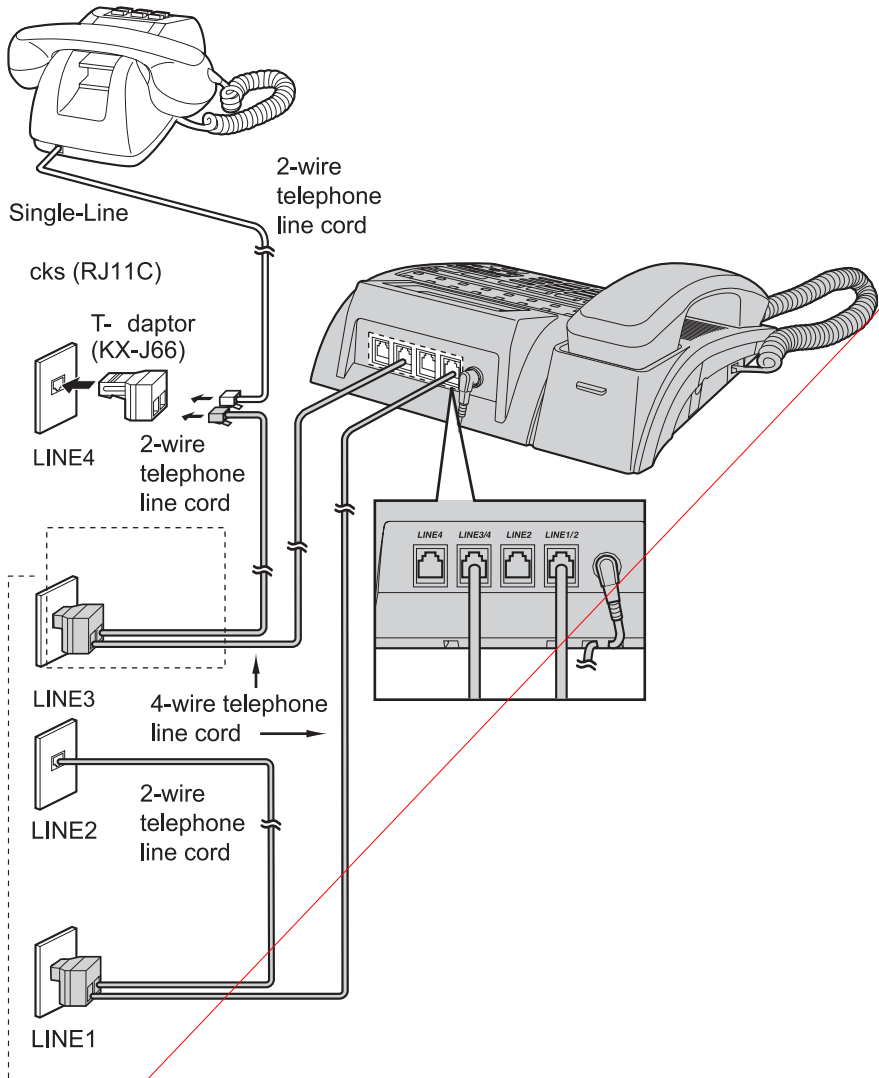

\*1 2-line adaptor merges a 2-wire (single line) telephone outlet with another 2-wire (single line) telephone line onto a single 4-wire (2-line) telephone line cord. ☐ & ☐ 662 ☐ (☐)

If the unit detects a problem, one of the following messages is shown on the display.

<b>Busy:AA Mode</b>	<ul style="list-style-type: none"><li>● The phone is currently carrying out the Automated Attendant System process.</li></ul>
<b>Busy:Record Mode</b>	<ul style="list-style-type: none"><li>● The phone is currently carrying out the recording process.</li></ul>
<b>Busy:Remote Mode</b>	<ul style="list-style-type: none"><li>● The phone is currently being accessed remotely.</li></ul>
<b>Phonebook Full!</b>	<ul style="list-style-type: none"><li>● There is no space in the phonebook to store new items from the caller list or redial list. Erase unnecessary items (see "Erasing one item in the phonebook" on page 34).</li></ul>
<b>(Full)</b>	<ul style="list-style-type: none"><li>● There is no space in the phonebook to store new items. Erase unnecessary items (see "Erasing one item in the phonebook" on page 34).</li></ul>
<b>LOW BATT</b>	<ul style="list-style-type: none"><li>● No battery is installed.</li><li>● The battery may need to be replaced with a new one (see "Battery replacement" on page 12).</li></ul>
<b>Memory Full</b>	<ul style="list-style-type: none"><li>● The message memory is full. Erase unnecessary messages (see "Erasing a message" on page 61).</li></ul>
<b>PowerFail</b>	<ul style="list-style-type: none"><li>● When the phone is disconnected from a power outlet or there is a power failure, the battery works as emergency power. When power is restored, "PowerFail" will disappear on the display.</li></ul>

The unit does not work.	<ul style="list-style-type: none"><li>● Check the connections (page 14, 15, 16, 17).</li><li>● Unplug the AC adaptor to reset the unit. Reconnect the adaptor and try again.</li></ul>
The line indicators do not work properly.	<ul style="list-style-type: none"><li>● Check the connections (page 14, 15, 16, 17).</li></ul>
The unit does not ring.	<ul style="list-style-type: none"><li>● The ringer is set to "off". Turn it on (see "Turning ringer on/off" on page 26).</li><li>● The Do Not Disturb (DND) feature is turned on. Turn it off (see "Turning Do Not Disturb (DND) on/off" on page 27).</li><li>● If there are several non-system phones on the line that do not ring, disconnect some of them. Having too many phones connected can also result in low ringer volumes on non-system phones.</li></ul>

You cannot hear a dial tone.	<ul style="list-style-type: none"> <li>● Check the connections (see “Connecting the handset and AC adaptor” on page 14).</li> <li>● Confirm the telephone line cord is properly connected (page 15, 16, 17).</li> <li>● Disconnect the unit from the telephone line and connect a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your telephone service provider.</li> </ul>
You cannot dial.	<ul style="list-style-type: none"> <li>● Check whether the dialing mode selection is correct (see “Dialing mode” on page 24).</li> </ul>
Date and time on the display flashes.	<ul style="list-style-type: none"> <li>● Set the date and time (see “Date and time” on page 24).</li> <li>● If you subscribe to Caller ID service, date and time is automatically set when an outside call is received (see “Automatically setting date and time” on page 44).</li> </ul>
The battery is discharged.	<ul style="list-style-type: none"> <li>● Please remove the battery when you cut the power supply, as the battery will discharge automatically once the power is cut according to the time shown on page 12.</li> </ul>
How do I return to standby mode quickly?	<ul style="list-style-type: none"> <li>● Lift the handset, then place it back on the cradle.</li> <li>● Press [ ] 2 times.</li> </ul>

You cannot program function items, such as the dialing mode.	<ul style="list-style-type: none"> <li>● Programming is not possible while in the talk or intercom mode, or while listening to messages or the answering system is answering a call.</li> <li>● Do not pause for over 30 seconds while programming.</li> <li>● Make sure that the unit is in standby mode.</li> </ul>
--	---

Static is heard, sound cuts in and out.	<ul style="list-style-type: none"> <li>● If your unit is connected to a telephone line with DSL service, we recommend connecting a noise filter between the unit and the telephone line jack (see “Connecting 2 two-line telephone jacks” on page 18, “Connecting four single-line telephone jacks” on page 19). Contact your DSL provider for details.</li> </ul>
You cannot redial the last number dialed.	<ul style="list-style-type: none"> <li>● If the last number dialed was more than 32 digits long, the number cannot be redialed.</li> <li>● Access numbers entered after pressing [ * ] (TONE) will not be included when redialing.</li> </ul>

## Useful Information

You cannot have a conversation using the headset.	<ul style="list-style-type: none"><li>● Make sure that [ ] is pressed.</li><li>● Make sure that the headset is plugged into the headset jack properly (see "Connecting the optional headset to the unit" on page 66).</li></ul>
During a power failure, you cannot make or answer a call.	<ul style="list-style-type: none"><li>● Make sure that a battery has been installed properly (see "Battery installation" on page 12).</li><li>● The battery may have been discharged. In that case, replace the battery with a new one (see "Battery replacement" on page 12).</li></ul>
The intercom does not work.	<ul style="list-style-type: none"><li>● DSL Internet connection and KX-TS4100/KX-TS4200/KX-TS4300 Intercom work at similar frequencies. Please contact Panasonic at 1-800-211-PANA (1-800-211-7262) for special wiring configurations.</li></ul>
You cannot page other extension.	<ul style="list-style-type: none"><li>● The unit is in use. Try again later.</li></ul>
You cannot answer the transferred call even if the display shows "Transfer From xx".	<ul style="list-style-type: none"><li>● The transferred call was disconnected before you answered it.</li></ul>

You cannot store a name and phone number in the phonebook.	<ul style="list-style-type: none"><li>● Do not pause for over 30 seconds while programming.</li><li>● Make sure that the unit is in standby mode.</li></ul>
The display returns to standby mode while viewing the phonebook.	<ul style="list-style-type: none"><li>● Do not pause for over 30 seconds while searching.</li></ul>



<p>The caller's information is not displayed.</p>	<ul style="list-style-type: none"> <li>● You have not subscribed to Caller ID service. Contact your telephone company to subscribe.</li> <li>● If your unit is connected to any additional telephone equipment such as a Caller ID box or cordless telephone jack, disconnect the unit from the equipment and plug the unit directly into the wall jack.</li> <li>● If your unit is connected to a telephone line with DSL service, we recommend connecting a noise filter between the unit and the telephone line jack (see "Connecting 2 two-line telephone jacks" on page 18, "Connecting four single-line telephone jacks" on page 19). Contact your DSL provider for details.</li> <li>● The name display service may not be available in some areas. Contact your telephone company for details.</li> <li>● Other telephone equipment may be interfering with this unit. Disconnect the other equipment and try again.</li> <li>● The caller requested not to send caller information (see "Incoming Caller ID display" on page 43).</li> <li>● If a call is being transferred to you, the caller information is not displayed.</li> <li>● Generally, caller information is displayed from the 2nd ring.</li> </ul>
<p>The display returns to standby mode while viewing the caller list.</p>	<ul style="list-style-type: none"> <li>● Do not pause for over 30 seconds while searching.</li> </ul>
<p>When a 2nd call is received on the same line, the unit does not display the new caller's information.</p>	<ul style="list-style-type: none"> <li>● You have not subscribed to Caller ID and/or Call Waiting with Caller ID services. Please contact your telephone service provider for details and availability of this service in your area.</li> <li>● If another call is received on the same line while;             <ul style="list-style-type: none"> <li>–the Automated Attendant System or answering system is responding to a call, or</li> <li>–a call is placed on hold,</li> </ul>             the caller information will not be displayed.           </li> </ul>
<p>You cannot dial the phone number edited in the caller list.</p>	<ul style="list-style-type: none"> <li>● The phone number you dialed might have an incorrectly edited pattern (for example, the long distance "1" or the area code is missing). Edit the phone number with another pattern (see "Editing a caller's phone number before calling back" on page 45).</li> </ul>

The unit does not record new messages.	<ul style="list-style-type: none"><li>● The answering system is off. Turn it on (see “Turning the answering system on/off ” on page 57).</li><li>● The caller’s message length is set to “<b>Greeting Only</b>”. Select a different setting (see “Caller’s message length” on page 64).</li><li>● The message memory is full. Erase unnecessary messages (see “Erasing a message” on page 61).</li><li>● If you subscribe to the Voice Mail service, messages are recorded by the telephone service provider not your telephone (see “For Voice Mail service subscribers” on page 64).</li></ul>
“ <b>Memory Full</b> ” flashes on the display, and no new messages are recorded.	<ul style="list-style-type: none"><li>● The message memory is full. Erase unnecessary messages (see “Erasing a message” on page 61).</li></ul>
You cannot listen to messages from a remote location.	<ul style="list-style-type: none"><li>● A touch tone phone is required for remote operation.</li><li>● Enter the remote code correctly (see “Remote code” on page 62).</li><li>● The answering system is off. Turn it on (see “Turning the answering system on/off ” on page 57).</li><li>● The answering system may not respond if the tones are too short to activate the unit. Press each button firmly.</li><li>● If you enter the wrong remote code, hang up and then try again.</li></ul>
While recording a greeting message, the unit starts to ring and stops recording.	<ul style="list-style-type: none"><li>● A call is being received. Answer the call and start again after hanging up.</li></ul>
During playback, incoming call tones are heard.	<ul style="list-style-type: none"><li>● A call is being received. Answer the call and start again after hanging up.</li></ul>
You have a difficulty in intercepting a call during message recording.	<ul style="list-style-type: none"><li>● “<b>Intercept Call</b>” is turned off. Turn it on (see “Turning the intercept call on/off ” on page 58).</li><li>● Use a phone connected to the line of the incoming call.</li></ul>

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:ACJ-----. If requested, this number must be provided to the telephone company.

- Registration No.

.....(found on the bottom of the unit)

- Facility Interface Code.....02LS2

- Service Order Code.....9.0F

- Required Network Interface Jack

.....RJ11C, RJ14C

- Ringer Equivalence No.

(REN).....0.3B

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with the product. It is designed to be connected to a compatible modular jack that is also compliant.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that

## Useful Information

---

This equipment is hearing aid compatible as defined by the FCC in 47 CFR Section 68.316.

### WHEN PROGRAMMING EMERGENCY NUMBERS AND(OR) MAKING TEST CALLS TO EMERGENCY NUMBERS:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call.
- 2) Perform such activities in the off-peak hours, such as early morning or late evenings.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

	5 °C – 40 °C (41 °F – 104 °F)
	Approx. height 105 mm x width 245 mm x depth 225 mm (4 <sup>1</sup> / <sub>8</sub> inches x 9 <sup>21</sup> / <sub>32</sub> inches x 8 <sup>7</sup> / <sub>8</sub> inches)
	Approx. 1,090 g (2.4 lb.)
	Standby: Approx. 5 W (PQLV210Z) Maximum: Approx. 8 W (PQLV210Z)
	AC adaptor (120 V AC, 60 Hz)

- Design and specifications are subject to change without notice.
- The illustrations in these instructions may vary slightly from the actual product.



**PANASONIC CONSUMER  
ELECTRONICS COMPANY, DIVISION  
OF PANASONIC CORPORATION OF  
NORTH AMERICA**  
One Panasonic Way,  
Secaucus, New Jersey 07094

**PANASONIC PUERTO RICO, INC.**  
San Gabriel Industrial Park,  
Ave. 65 de Infantería, Km. 9.5,  
Carolina, Puerto Rico 00985

## Panasonic Telephone Products Limited Warranty

### Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Puerto Rico, Inc. (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

#### Parts

**One (1) Year**

#### Labor

**One (1) Year**

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" Limited Warranty period, there will be no charge for parts. You must mail-in your product prepaid during the Limited Warranty period. This Limited Warranty excludes both parts and labor for batteries, antennas, and cosmetic parts (cabinet). This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers products purchased as new.

### Mail-In Service

For assistance in the continental U.S.A. in obtaining repairs please ship the product prepaid to:

**Panasonic Services Company Customer Servicenter**

**4900 George McVay Drive Suite B Door #12 McAllen, TX 78503**

For assistance in Puerto Rico call Panasonic Puerto Rico, Inc. (787)-750-4300 or fax (787)-768-2910.

When shipping the unit carefully pack, include all accessories, and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone number where you can be reached.

**IF REPAIR IS NEEDED DURING THE LIMITED WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.**

### Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, bug infestation, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, or rental use of the product, or service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY.** (As examples, this excludes damages for lost time, lost calls or messages, cost of having someone remove or re-install an installed unit if applicable, travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.**



- Answering calls: 26
- Answering system
  - Erasing messages: 61, 63
  - Listening to messages: 60, 63
  - TAD answer delay: 57
  - Turning on/off: 57, 63
- Area codes: 43, 45
- Auto mute: 39
- Automated Attendant System
  - Answer delay: 54
  - Turning on/off: 53
- Battery
  - Installation: 12
  - Life: 12
  - Replacement: 12
- Call privacy: 28
- Call screening: 58
- Call Waiting: 29
- Call Waiting Caller ID: 43
- Caller ID service: 43
- Caller list
  - Calling back: 44
  - Editing: 45
  - Erasing: 47
  - Storing: 46, 47
  - Viewing: 44
- Chain dial: 34
- Conference calls: 41
- Connections
  - Communication device: 22
  - Handset and AC adaptor: 14
  - Noise filter: 18, 19
  - Standard telephone: 69
  - Telephone line cords: 15, 16, 17
- Date and time: 24
- Day time: 54
- Dialing mode: 24
- Display language: 23
- Do Not Disturb (DND): 27
- Error messages: 70
- Extension No.: 23
- Flash: 29
- Flash time: 30
- Greeting message: 59
- Headset, optional: 66
- Hold: 28
- Hold reminder: 29
- Intercept call: 58
- Intercom: 38
- Line group: 20, 52
- Making calls: 25
- Memory capacity: 57
- Memory card: 11
- Message length: 64
- Message waiting: 65
- Missed calls: 43
- Mute: 29
- Navigator key: 10
- Night time: 54
- Page: 39
- Pause: 26
- Phonebook: 31
- Power failure: 14
- Pre-recorded greeting message: 60
- Prime line: 51
- Pulse service: 30
- Redial list: 25
- Remote code: 62
- Remote operation: 62
- Reset all: 52
- Ringer on/off: 26
- Ringer type: 27
- Room monitor: 40
- Rotary service: 30
- Speed dial preference: 35
- Speed dialer: 35
- SP-phone: 25
- Toll saver: 63
- Tone service: 30
- Transferring calls: 40
- Troubleshooting: 70
- TTY: 5, 84
- Voice Mail service: 64, 65
- Voice memo: 61
- Volume
  - Handset: 25
  - Headset: 66
  - Ringer: 26
  - Speaker: 25
- Wall mounting: 67
- Warranty: 79





## ***If you need assistance with setup or operation***

Visit our website: <http://www.panasonic.com/phonehelp>

Contact us via the web at: <http://www.panasonic.com/contactinfo>

Call us at: 1-800-211-PANA (1-800-211-7262)

TTY users (hearing or speech impaired users) can call 1-877-833-8855.

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.
- Send the unit to Panasonic Services Company Customer Servicer, prepaid and adequately insured.
- Do not send your unit to Panasonic Consumer Electronics Company listed below or to executive or regional sales offices. These locations do not repair consumer products.

One Panasonic Way, Secaucus, New Jersey 07094

San Gabriel Industrial Park, Ave. 65 de Infantería, Km. 9.5,  
Carolina, Puerto Rico 00985

This material is copyrighted by Panasonic Communications (Malaysia) Sdn. Bhd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications (Malaysia) Sdn. Bhd.

© 2006 Panasonic Communications (Malaysia) Sdn. Bhd. All Rights Reserved.



FM0706FS1086